eldoLED

your product | *our drive*

Quick Start Guide LINEARdrive 100/M (LIN100M1)

Installing and configuring LINEARdrive 100/M

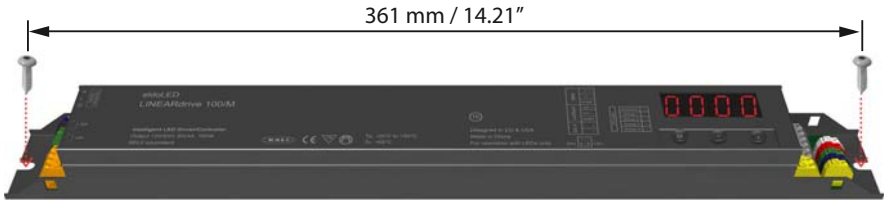

A Mounting the LINEARdrive

⚠ Pay attention when connecting the LED groups: polarity reversal results in no light output and often damages the LEDs

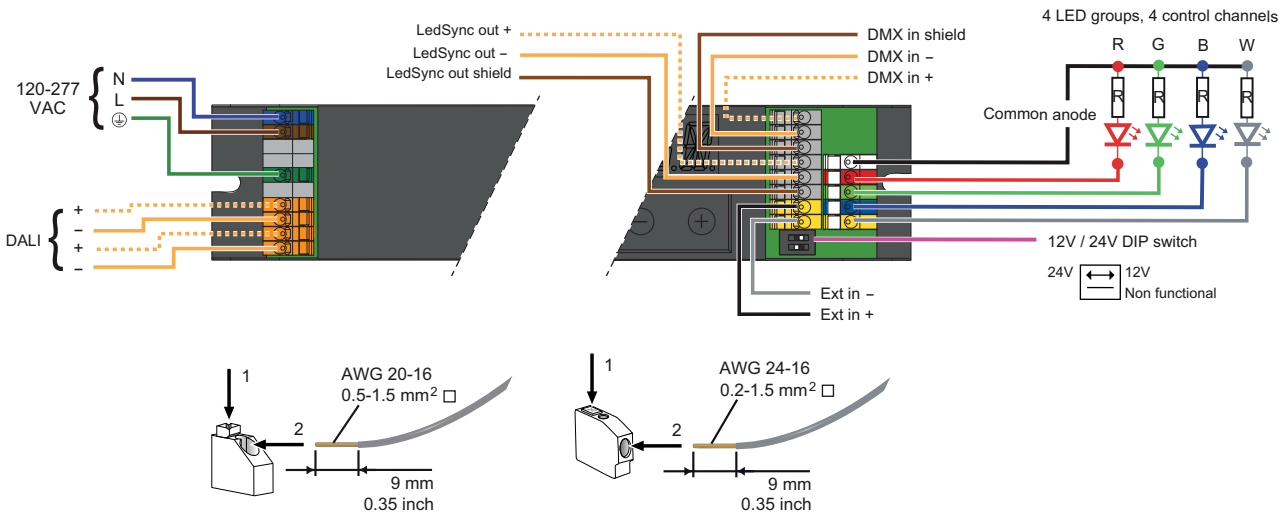

B Making the wire connections and setting the voltage

C Configuring the LINEARdrive

⚠ WARNING: Risk of electrical shock. May result in serious injury or death. Disconnect power before servicing or installing.

⚠ CAUTION: The device may only be connected and installed by a qualified electrician. All applicable regulations, legislation and building codes must be observed. Incorrect installation of the device can cause irreparable damage to the device and the connected LEDs.

© 2011 eldoLED. All rights reserved. V1.1
More product documentation and eldoLED’s terms and conditions are available at www.eldoled.com.

Manual configuration

1. Select mode of operation

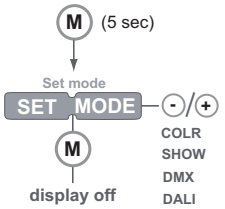

2. Set LED groups

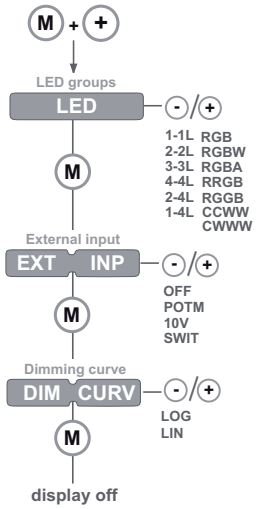

3. Standalone operation - Colour*- *or* Standalone operation - Show - *or* Networked operation - DMX or DALI -

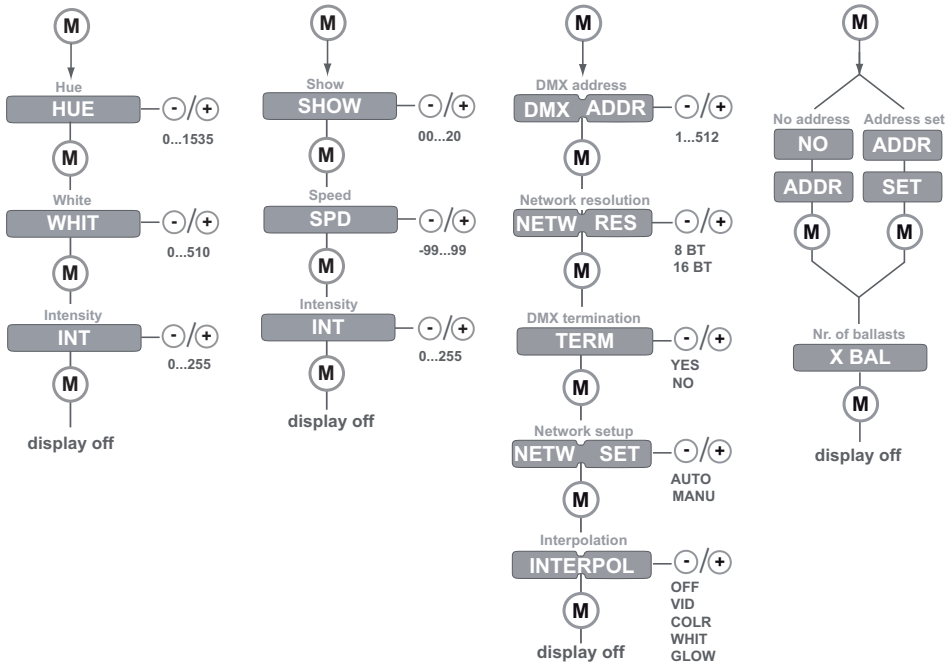

* The colour menu depends on the LED group settings you have selected in step 2.

Other features

Locking the configuration

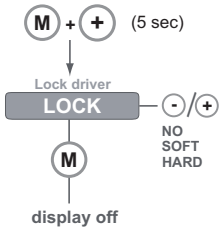

Visual test run

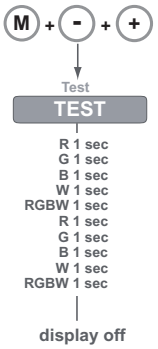

Reset to factory defaults

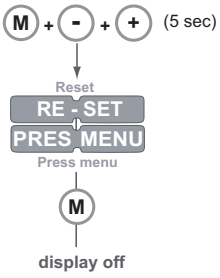

eldoLED Europe bv Luchthavenweg 18a 5657 EB Eindhoven The Netherlands T +31 40 2054050 F +31 40 2054058 info@eldoled.com
eldoLED America, Inc. 1762 Technology Drive # 226 San Jose, CA95110 USA T +1 408 451 9333 F +1 408 451 9335 nasales@eldoled.com