eldoLED

your product | *our drive*

Quick Start Guide POWERdrive 45D/90D/180D (PWRxxxD1)

Connecting and configuring the POWERdrive 45D/90D/180D

A Removing the cover

B Removing the strain reliefs

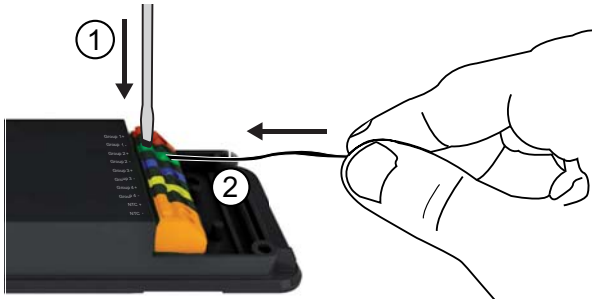

C Connecting LED wires

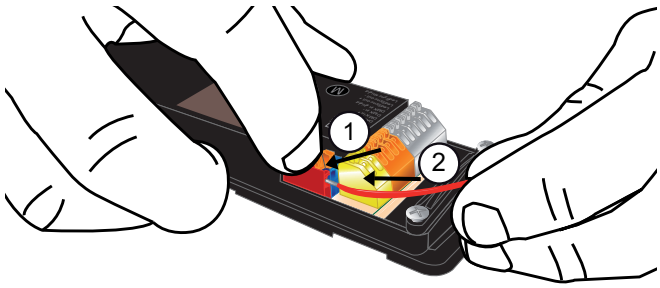

D Connecting power supply wires

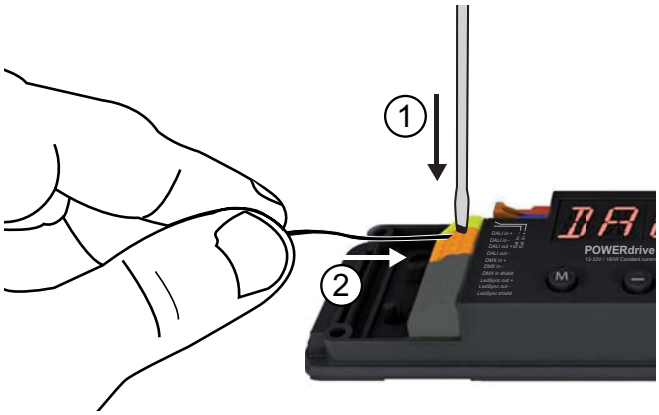

E Optional: Connecting external control device or network cabling

F Fastening the strain reliefs

G Configuring the POWERdrive

© 2011 eldoLED. All rights reserved. V2.4
More product documentation and eldoLED's terms and conditions are available at www.eldoled.com.

Manual configuration

1. Select mode of operation:

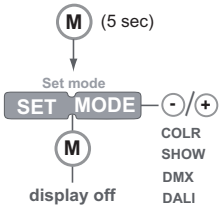

2. Set LED current and LED groups:

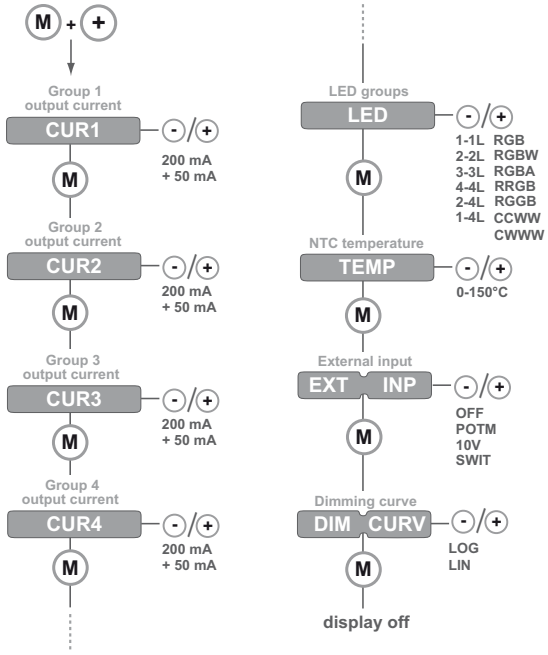

3. Standalone operation - Colour*- *or* Standalone operation - Show - *or* Networked operation - DMX or DALI -

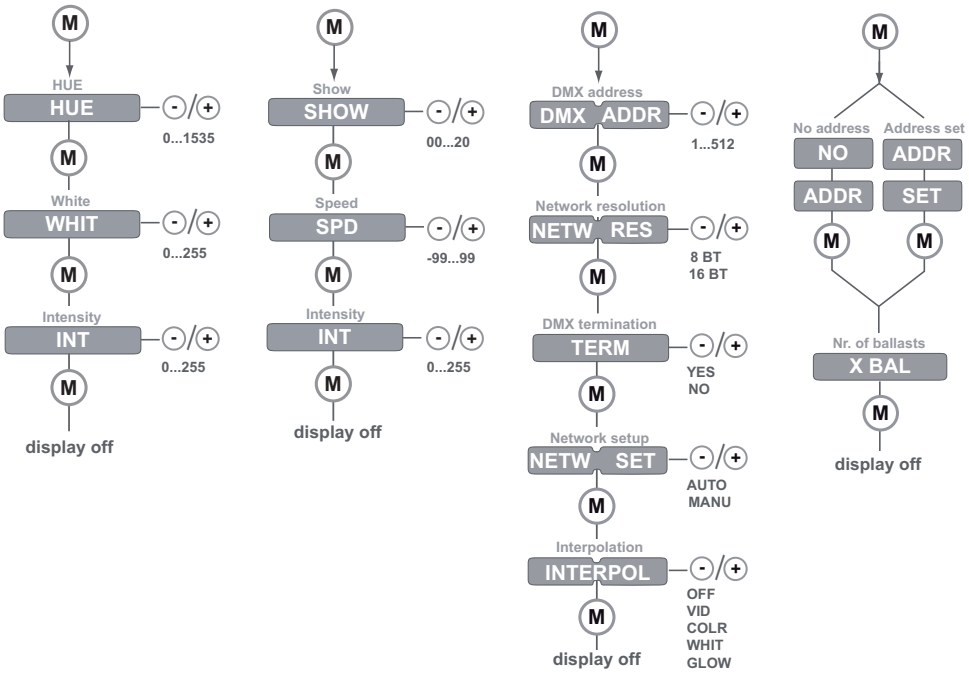

* The colour menu depends on the LED group settings you have selected in step 2.

Other features

Locking the configuration

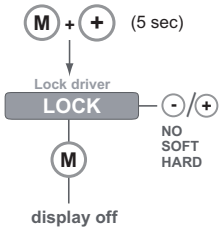

Visual test run

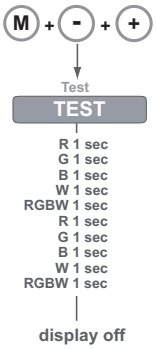

Reset to factory defaults

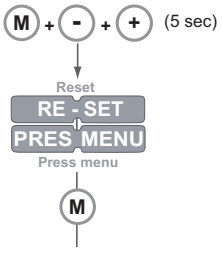

eldoLED Europe bv Luchthavenweg 18a 5657 EB Eindhoven The Netherlands T +31 40 2054050 F +31 40 2054058 info@eldoled.com
eldoLED America, Inc. 1762 Technology Drive # 226 San Jose, CA95110 USA T +1 408 451 9333 F +1 408 451 9335 nasales@eldoled.com